InvisiBrake Reference Information

Please note: this is NOT a fit chart. This resource document contains information on vehicles that have been seen at the Roadmaster factory. The chart is intended to be a helpful reference for installers and will continue to expand as more vehicles become accessible.

Absence from this resource document simply means the vehicle has not been through our factory.

Every reasonable effort was made to verify the accuracy of this information; however, ROADMASTER, Inc. does not warrant its accuracy and will not be liable for any claims or damages which may result from errors or omissions. Use this information at your own risk.

Information is continually changing and revised as new vehicles and information becomes available. Accordingly, this information is subject to change without any notice.

Questions? Comments? Call ROADMASTER Customer Service at 1-800-669-9690.

InvisiBrake Application Information Current as of March 4, 2024

Abbreviations Key: DS = Driver's Side PS = Passenger Side

Every reasonable effort was made to verify the accuracy of this information; however, ROADMASTER, Inc. does not warrant its accuracy and disclaims all liability for any claims or damages which may result from errors or omissions.

Questions? Comments? Call ROADMASTER Customer Service at 1-800-669-9690.

Towing and Suspension Solutions	year	preferred location for InvisiBrake	starting braking pressure*	location of battery	location of remote positive post, if vehicle is so equipped	Notes
BUICK						
Encore GX	20-24	cargo area	30 psi	under hood, PS	n/a	
Enclave	08-12	under seat, DS	65 psi	under hood, PS	n/a	
Enclave	13-17	cargo area	65 psi	behind seat, PS	under hood, PS	
Envision	16-20	under seat, PS or cargo area	60 psi	under hood, DS	n/a	
Regal	11-12	cargo area	60 psi	under hood, DS	n/a	
CADILLAC						
Escalade	15-20	cargo area	60 psi	under hood, DS	n/a	
Escalade	21-23	cargo area	30 psi	under hood, DS	n/a	1
SRX	10-12	cargo area	65 psi	under hood, DS	n/a	
SRX	13-16	cargo area	65 psi	under hood, DS	n/a	
CHEVROLET						
Blazer	19-21	under rear seat	60 psi	under hood, DS	n/a	
Colorado Pick-up	08-11	under seat, DS	55 psi	under hood, DS	n/a	
Colorado Pick-up	12-14	under rear seat	65 psi	under hood, DS	n/a	
Colorado Pick-up	15-17	under seat, DS	70 psi	under hood, DS	n/a	
Colorado Pick-up	18-20	under seat, PS	60 psi	under hood, DS	n/a	
Colorado Pick-up	21-22	under rear seat, DS	60 psi	under hood, DS	n/a	6
Colorado Pick-up	23-24	under rear seat, DS or PS	20-30 psi	under hood, DS	n/a	
Cruze	11-12	trunk	40 psi	under hood, DS	n/a	
Cruze	13-18	under seat, DS	60 psi	under hood, DS	n/a	
Equinox	11-15	under seat, DS	60 psi	under hood, DS	n/a	
Equinox	16-18	under seat, PS	60 psi	under hood, DS	n/a	
Equinox	19-24	under rear seat	60 psi	under hood, DS	n/a	
HHR	06-11	under seat, DS	60 psi	cargo area	under hood, PS	
Malibu	08-12	behind seat, DS	65 psi	under hood, DS	n/a	
Malibu	14-15	under seat, PS or cargo area	60 psi	under hood, DS	n/a	
Malibu	16-21	under seat, DS	50 psi	under hood, DS	n/a	
Malibu Limited	16	under seat, PS or cargo area	60 psi	under hood, DS	n/a	
Silverado 1500 Pick-up	14-21	under seat, DS	60 psi	under hood, DS	n/a	11
Silverado 1500 Pick-up	22-24	under seat, DS	20-30 psi	under hood, DS	n/a	1
Silverado 2500 Pick-up	14-18	under seat, DS	60 psi	under hood, DS	n/a	1
Silverado 2500 Pick-up	20-24	under seat, DS	20-30 psi	under hood, DS	n/a	1
Silverado 3500 Pick-up	14-18	under seat, DS	60 psi	under hood, DS	n/a	1
Silverado 3500 Pick-up	20-24	under seat, DS	20-30 psi	under hood, DS	n/a	1
Sonic	12-20	under front seats	60 psi	under hood, DS	n/a	
Spark	13-15	under seat, DS	60 psi	under hood, DS	n/a	
Spark	16-20	under seat, PS	60 psi	under hood, DS	n/a	

ROADMASTER Towing and Suspension Solutions	year	preferred location for InvisiBrake	starting braking pressure*	location of battery	location of remote positive post, if vehicle is so equipped	Notes
Suburban	07-14	under seat. DS	60 psi	under hood, PS	n/a	
Suburban	15-21	cargo area	60 psi	under hood, DS	n/a	
Suburban	22-24	under seat, DS	30-35 psi	under hood, DS	n/a	
Suburban Z71	16-20	cargo area	70 psi	under hood, DS	n/a	
Tahoe	15-19	cargo area	60 psi	under hood, DS	n/a	
Tahoe Z71	15-20	cargo area	60 psi	under hood, DS	n/a	
Tahoe Z71	21-22	cargo area	35 psi	under hood, DS	n/a	
Tahoe	21-23	cargo area	60 psi	under hood, DS	n/a	
Trailblazer	21-23	under seat, DS	60 psi	under hood, DS	n/a	
Traverse	13-21	under seat, PS	60 psi	behind seat, PS	under hood, PS	
Traverse	22-23	cargo area	60 psi	behind seat, PS	under hood, PS	
Traverse Limited	24	cargo area	60 psi	behind seat, PS	under hood, PS	
CHRYSLER	<u>-</u> :	oa.go a.oa	00 00.	20	and not an indication	
	12-14	20120 0100	60 noi	2/2	under head DC	
200	12-14	cargo area	60 psi	n/a	under hood, DS	
DODGE						
Dart	13-16	under seat, DS	60 psi	under hood, PS	under hood, DS	
Durango	14-23	under seat, PS	60 psi	under hood, PS	under hood, DS	
Ram 1500 Pick-up	11-17	under seat, DS or PS	60 psi	under hood, DS	n/a	
Ram 1500 Pick-up	18-21	under rear seat	65 psi	under hood, DS	n/a	
Ram 2500 Pick-up	10-21	not recommended	n/a	cargo area	under hood, DS	1,2
Ram 3500 Pick-up	10-21	not recommended	n/a	cargo area	under hood, DS	1,2
FIAT						
500	12-18	under seat, DS	70 psi	under hood, DS	n/a	
500L	14-16	under seat, DS	60 psi	under hood, DS	n/a	
FORD						
Bronco	21-23	under seat, DS	30 psi	n/a	under hood, DS	
Bronco Raptor	23-24	cargo area	20-35 psi	n/a	under hood, DS	
C-Max	13-18	under seat, DS	footnote 4	cargo area	under hood, DS	4
Edge	11-18	under seat, DS or PS	60 psi	under hood, DS	n/a	-
Edge ST	19-23	under seat, DS or PS	60 psi	under hood, DS	n/a	
Escape Hybrid	20-24	cargo area	20 psi	under hood, DS	n/a	4
Expedition	07-17	under seat, DS	60 psi	under hood, DS	n/a	·
Explorer	11-12	under seat, DS	60 psi	under hood, DS	n/a	
Explorer (inc. Sport)	13-19	under seat, DS	65 psi	under hood, DS	n/a	
Fiesta	14-19	under seat, DS	60 psi	under hood, DS	n/a	
Flex	13-19	under seat, DS	60 psi	under hood, DS	n/a	
Focus	12-18	under seat. DS	60 psi	under hood, DS	n/a	
Focus ST	13-14	under seat, DS	60 psi	under hood. DS	n/a	
Fusion	11-19	under seat, DS	60 psi	under hood, DS	n/a	
F-150 Pick-up	10-19	under seat, DS	70 psi	under hood, DS	n/a	
F-150 Pick-up	20-22	under seat, rear	25-35 psi	under hood. DS	n/a	
F-150 Pick-up	23	under seat, rear	20 psi	under hood, DS	n/a	
F-150 Raptor Pick-up	21-22	under seat, rear	25-35 psi	under hood, DS	n/a	
F-250 Pick-up	17-21	not recommended	n/a	n/a	n/a	1,2
F-350 Pick-up	17-21	not recommended	n/a	n/a	n/a	1,2
Maverick	22	under rear bench	15-20 psi	under hood, DS	n/a	- ,
Ranger Pick-up	19-23	cargo area	60 psi	under hood, DS	n/a	
Taurus	13-18	cargo area	60 psi	under hood, DS	n/a	
Transit	15-20	n/a	n/a	n/a	n/a	5
						-

Towing and Suspension Solutions Sprinter	year 13-18	preferred location for InvisiBrake n/a	starting braking pressure* n/a	location of battery n/a	location of remote positive post, if vehicle is so equipped	Notes 1, 2
GMC						
Acadia	11-17	behind seat, DS	60 psi	behind seat, PS	under hood, PS	
Acadia	18-19	cargo area	60 psi	behind seat, PS	under hood, PS	
Canyon Pick-up	15-22	under seat, DS	70 psi	under hood, DS	n/a	
Canyon Pick-up	23	under rear seat, DS or PS	20-30 psi	under hood, DS	n/a	
Savana 2500	07-17	n/a	n/a	n/a	n/a	3
Savana 3500	07-17	n/a	n/a	n/a	n/a	3
Sierra 1500 Pick-up	11-21	under rear seat, DS or PS	60 psi	under hood, DS	n/a	1.0
Sierra 1500 Pick-up	22-23	not recommended	n/a		n/a	1,2
Sierra 1500 Pick-up	24	Lundon room coat DC on DC	30 psi	under hood, DS	n/a	
Sierra 1500 Limited Pick-up Sierra 2500 Pick-up	15-18 15-23	under rear seat, DS or PS	65 psi	under hood, DS	n/a	1.2
		not recommended	n/a		n/a	1,2
Sierra 3500 Pick-up Terrain	15-23 11-12	not recommended under seat, DS	n/a 60 psi	under hood, DS	n/a n/a	1,2
Terrain	13-16	•	60 psi	under hood, DS	n/a	
Yukon 1500 and 1500 XL	15-10	cargo area	60 psi	under hood, DS	n/a	
Yukon 1500 and Yukon XL	21-24	cargo area	20 psi	under hood, DS	n/a	
	21-24	cargo area	20 psi	under nood, DS	TI/a	
HONDA	44.40		00	dankaad DO	2/2	
Accord	11-12	cargo area	60 psi	under hood, DS	n/a	
Accord	18-20	n/a	n/a	n/a	n/a	5
Civic	12	under seat, DS or PS	60 psi	under hood, DS	n/a	
Civic	18-19 20	under seat, DS under seat, DS	50 psi	under hood, DS under hood, DS	n/a	
CRV	04-12	under seat, DS under seat, DS	60 psi 65 psi	under hood, DS under hood, DS	n/a n/a	
CRV	13-14	under seat, DS under seat, DS	60 psi	under hood, DS	n/a	
Fit	12-13	under seat, DS under seat, DS	50 psi	under hood, DS	n/a	
Fit	15-18	cargo area	60 psi	under hood, DS	n/a	
HRV	16-18	cargo area, under floor	60 psi	under hood, DS	n/a	
Pilot	05-15	under seat, DS	55 psi	under hood, DS	n/a	
HYUNDAI	09-19	under seat, DS	33 psi	drider riood, BS	11/a	
	12.24	under seet DC	50 mai	under beed DC	72/2	
Accent	12-21 11-18	under seat, DS under seat, DS	50 psi 60 psi	under hood, DS under hood, DS	n/a	
Elantra (inc. GT)	20	under seat, DS under seat, DS		under hood, DS	n/a	
Veloster	12-13	cargo area	60 psi 60 psi	under hood, DS	n/a n/a	
Veloster	14-17	under seat, DS	60 psi	under hood, DS	n/a	
Venue	20	under seat, DS under seat, DS	60 psi	under hood, DS		
	20	unuer Seat, DS	ου μει	unuei 1100u, D3	n/a	
Jeep	44.04	under DO	00 ===!	daukl DO	no / -	
Cherokee	14-21	under seat, DS	60 psi	under hood, DS	n/a	
Compass	11-17	under seat, DS	60 psi	under hood, DS	n/a	
Gladiator Crond Charakaa	20-24	under seat, DS	60 psi	under hood, DS	n/a	
Grand Cherokee	10-21	under seat, DS	60 psi	under hood, DS	n/a	
Grand Waganeer	22-24	cargo area	25-30 psi	under hood, DS under hood. DS	n/a	
Grand Wagoneer	22-24	cargo area	25-30 psi		n/a	
Liberty Patriot	08-12 11-17	under seat, DS or PS under seat, DS	60 psi 60 psi	under hood, DS under hood, DS	n/a n/a	
Wagoneer Wrangler	22 05-24	cargo area under seat, DS	25-30 psi	under hood, DS under hood, PS	n/a	
	05-24	under Seat, DS	60 psi	unuei noou, PS	n/a	
KIA	47.10		00	and and a 1 DO		
Forte	17-18	under seat, DS	60 psi	under hood, DS	n/a	

Towing and Suspension Solutions	year	preferred location for InvisiBrake	starting braking pressure*	location of battery	location of remote positive post, if vehicle is so equipped	Notes
Rio	12-15	under seat, DS	50 psi	under hood, DS	n/a	
Rio	16-19	under seat, DS	60 psi	under hood, DS	n/a	
Sportage	11-13	under seat, DS or PS	60 psi	under hood, DS	n/a	
Soul	14-19	under seat, DS	60 psi	under hood, DS	n/a	
Soul	20-21	under seat, DS	50 psi	under hood, DS	n/a	
Soul GT-Line	21-22	under seat, DS	50 psi	under hood, DS	n/a	
LINCOLN			30 10			
Corsair	21-24	cargo area	20-35 psi	under hood, DS	n/a	
MKS	13-16	cargo area	50 psi	under hood, DS	n/a	
MKT	10-19	under seat, DS	60 psi	under hood, DS	n/a	
MKX	13-18		60 psi	under hood, DS	n/a	
MKZ (inc. Hybrid)	13-16	cargo area	60 psi	under hood, DS	n/a	
	21-23	cargo area				
Nautilus Navigator		under seat, DS	60 psi	under hood, DS	n/a	
Navigator	19-21 22-24	cargo area	65 psi	under hood, DS under hood, DS	n/a n/a	
Navigator	22-24	cargo area	20-35 psi	under nood, DS	n/a	
MAZDA						
Mazda3	10-11	under seat, DS or PS	60 psi	under hood, DS	n/a	
MERCEDES						
Sprinter	13-18	n/a	n/a	n/a	n/a	1, 2
MERCURY						·
Mountaineer	06-10	under seat, rear	65 psi	under hood, DS	n/a	
MINI	00 10	drider seat; rear	00 poi	ander need, Be	11/4	
	44.40	under each DC	CO ==:	under beed DC	70/0	
Cooper	11-12	under seat, PS	60 psi	under hood, DS	n/a	
Cooper	13-22	cargo area	60 psi	under hood, PS	n/a	
Cooper F56	16-18	cargo area	65 psi	under hood, DS	n/a	
Cooper Countryman	13-16	cargo area	65 psi	under hood, PS	n/a	
NISSAN						
Frontier Pick-up	05-22	under seat, DS	60 psi	under hood, PS	n/a	
Juke	11-14	under seat, DS	60 psi	under hood, PS	n/a	
NV	18-20	n/a	n/a	n/a	n/a	2
Sentra	16-19	cargo area	60 psi	under hood, DS	n/a	
Versa	15-21	under seat, DS	60 psi	under hood, DS	n/a	
Versa Note	14-16	under seat, DS	60 psi	under hood, DS	n/a	
Versa Note with power seats	14-16	n/a	n/a	n/a	n/a	3
SATURN						
Station Wagon	96-02	under seat, DS or PS	60 psi	under hood, DS	n/a	
L-Series	00-05	under seat, PS	60 psi	cargo area	n/a	
SCION						
TC	14-16	cargo area	60 psi	under hood, DS	n/a	
XB	08-15	under seat, DS	60 psi	under hood, DS	n/a	
	00 10	under seat, bo	00 psi	ander nood, DO	Π/α	
SUBARU	46.00	under LDC	CO == =!	undank DO	m/-	
CrossTrek	16-23	under seat, DS	60 psi	under hood, PS	n/a	
Forester	14-18	under seat, DS or PS	60 psi	under hood, DS	n/a	
Impreza	15-19	under seat, DS	60 psi	under hood, DS	n/a	
Impreza WRX	15-20	under seat, DS	60 psi	under hood, DS	n/a	
Legacy Outback	11-17	under seat, DS	65 psi	under hood, DS	n/a	
Legacy	14	under seat, DS	65 psi	under hood, DS	n/a	
Outback	10-17	under seat, DS	65 psi	under hood, DS	n/a	
XV CrossTrek	13-15	under seat, DS	60 psi	under hood, DS	n/a	

ROADMASTER Towing and Suspension Solutions	year	preferred location for InvisiBrake	starting braking pressure*	location of battery	location of remote positive post, if vehicle is so equipped	Notes
SUZUKI						
Grand Vitara	09-14	under seat, DS	60 psi	under hood, PS	n/a	
TOYOTA						
4Runner	06-18	not recommended	n/a		n/a	2
4Runner	19-24	under seat, DS	60 psi	under hood, DS	n/a	
Corolla	14-19	under seat, DS	60 psi	under hood, DS	n/a	
Corolla iM	17-18	under seat, DS	60 psi	under hood, DS	n/a	
Tacoma Pick-up	05-15	under seat, DS	50 psi	under hood, DS	n/a	4
Tacoma Pick-up	16-23	behind seat, DS	65 psi	under hood, DS	n/a	4
Tundra	07-20	under seat, DS	60 psi	under hood, DS	n/a	
Yaris	07-17	under seat, DS	60 psi	under hood, DS	n/a	
Yaris IA	17-18	under seat, DS	60 psi	under hood, DS	n/a	
Yaris	19	under seat, DS	60 psi	under hood, DS	n/a	
VOLKSWAGEN						
Golf	10-15	cargo area	60 psi	under hood, DS	n/a	
Jetta	15-17	cargo area	60 psi	under hood, DS	n/a	
VW Bug	12-14	cargo area	60 psi	under hood, PS	n/a	

Notes

- 1. InvisiBrake is not compatible with diesel models of this vehicle.
- 2. InvisiBrake is not compatible with Hydroboost brakes.
- 3. InvisiBrake may not fit under the seats of vehicles with power seats.
- 4. Start the brake pressure at 20 psi and adjust up if additional braking force is desired.
- 5. InvisiBrake cannot be used because there is no way to attach the vacuum booster in this vehicle.
- 6. Trimming is necessary for the control unit to be mounted in this location.
- * This braking pressure is just a starting point. Please refer to the installation instructions for adjusting braking pressure, as the pressure needed can vary due to the following:
- Number of curves and tightness of the curves in the cable. The tighter the curves, the higher the pressure to achieve the same amount of braking power.
- Location of the clamp on the brake pedal arm -- the higher the clamp, the higher the pressure to achieve the same amount of braking power.
- Hybrids should should always start at 15 psi and be adjusted up accordingly, depending on the vehicle.