



Towing and Suspension Solutions

Which towed vehicle braking system is right for you?

Quick description

InvisiBrake®

Zip. Zero. Zilch. Nothing. Nada. Nil. That's what you have to do to connect and disconnect InvisiBrake. There's nothing to take in and out of your towed vehicle and there's nothing to push, pull, set, adjust, activate or deactivate.

What could be easier than nothing at all?

Even Brake®

Even Brake is the ultimate portable, proportional towed vehicle braking system. It automatically increases or decreases braking pressure in direct proportion to the motorhome.

If you tow multiple vehicles or trade in your towed vehicle every few years, Even Brake is the ideal choice.

BrakeMaster™

BrakeMaster is the best system for motorhomes with air brakes.

It connects directly to the motorhome's air braking system and brakes the towed vehicle in direct response — for as long as the motorhome brakes, and with the same intensity.

Braking method

Preset

When you apply braking force, so does InvisiBrake — up to the preset level. Braking pressure is easily adjustable to accommodate a wide range of vehicles and personal braking preferences.

Proportional

Brakes the towed vehicle at the same time *and* intensity as the motorhome.

Proportional

Brakes the towed vehicle at the same time *and* intensity as the motorhome.

Activated by

Motorhome brake signal

Connects to tow package wiring; activates only when motorhome brake lights illuminate — no false braking. Also works on motorhomes with exhaust brakes.

Motorhome deceleration

A microprocessor senses the motorhome's deceleration and signals a magnetic valve to release a proportional amount of air pressure against the brake pedal.

Motorhome brake pressure

Connects to the motorhome's air brake system — brake pressure in the motorhome controls the brakes in the towed vehicle; whenever you brake the motorhome, the same amount of braking is applied to the towed vehicle's brakes.

System communications

Two-tiered monitor

A dash light indicates braking activity; an audio alert at the motorhome indicates extended braking.

Three-tiered monitor

Continuously monitors system status; reports braking activity and 16 other system conditions via LED, LCD text, audio.

Two-tiered monitor

A dash light indicates braking activity; an audio alert at the motorhome indicates extended braking.

Towed vehicle protection modes

Automatically releases brakes if they've been on for too long; sends audible alert if brakes do not disengage. Constantly charges the towed vehicle battery while towing (will not drain battery). Includes an emergency break away system.

Visible and audible alerts warn if the brakes have been on for too long or if the towed vehicle's battery is low. Maximum brake pressure override for panic stop. Includes an emergency break away system.

Dash monitor provides a visual indicator of braking activity. Includes an emergency break away system.

Set up method

No set up required. Nothing to turn on, nothing to forget. Hidden installation on most vehicles.

Position Even Brake in the towed vehicle, connect to the brake pedal, plug in wires.

Connect air cylinder to brake pedal; pin to floor or seat adaptor; quick connect the air line.

* BrakeMaster is also available for motorhomes with hydraulic brakes.