

## **InvisiBrake Reference Information**

**Please note: this is NOT a fit chart. This resource document contains information on vehicles that have been seen at the Roadmaster factory. The chart is intended to be a helpful reference for installers and will continue to expand as more vehicles become accessible.**

**Absence from this resource document simply means the vehicle has not been through our factory.**

**Every reasonable effort was made to verify the accuracy of this information; however, ROADMASTER, Inc. does not warrant its accuracy and will not be liable for any claims or damages which may result from errors or omissions. Use this information at your own risk.**

**Information is continually changing and revised as new vehicles and information becomes available. Accordingly, this information is subject to change without any notice.**

**Questions? Comments? Call ROADMASTER Customer Service at 1-800-669-9690.**


## InvisiBrake Application Information

Current as of May 8, 2017

Abbreviations Key:  
DS = Driver's Side  
PS = Passenger Side

Every reasonable effort was made to verify the accuracy of this information; however, ROADMASTER, Inc. does not warrant its accuracy and disclaims all liability for any claims or damages which may result from errors or omissions.

Questions? Comments? Call ROADMASTER Customer Service at 1-800-669-9690.

 Towing and Suspension Solutions	year	preferred location for InvisiBrake	starting braking pressure*	location of battery	location of remote positive post, if vehicle is so equipped	Notes
<b>BUICK</b>						
Enclave	08-09	under seat, DS		under hood, PS	n/a	
Enclave	11	under seat, DS		under hood, PS	n/a	
Enclave	13-16	cargo area	65 psi	behind seat, PS	under hood, PS	
Envision	16	under seat, PS or cargo area	60 psi	under hood, DS	n/a	
Regal	11-12	cargo area		under hood, DS	n/a	
<b>CADILLAC</b>						
Escalade	15-17	cargo area	60 psi	under hood, DS	n/a	
SRX	12	cargo area	65 psi	under hood, DS	n/a	
SRX	13-16	cargo area	65 psi	under hood, DS	n/a	
<b>CHEVROLET</b>						
Colorado	08	under seat, DS	55 psi	under hood, DS	n/a	
Colorado	12	under rear seat	65 psi	under hood, DS	n/a	
Colorado	15-17	under seat, DS	70 psi	under hood, DS	n/a	
Cruze	11-12	trunk	40 psi	under hood, DS	n/a	
Cruze	13-16	under seat, DS	60 psi	under hood, DS	n/a	
Equinox	11-15	under seat, DS	60 psi	under hood, DS	n/a	
Equinox	16	under seat, PS	60 psi	under hood, DS	n/a	
HHR	07-11	under seat, DS		cargo area	under hood, PS	
Malibu	08	behind seat, DS	65 psi	under hood, DS	n/a	
Malibu	14-15	under seat, PS or cargo area	60 psi	under hood, DS	n/a	
Malibu	16-17	under seat, DS	60 psi	under hood, DS	n/a	
Malibu Limited	16	under seat, PS or cargo area	60 psi	under hood, DS	n/a	
Silverado 1500	14-17	under seat, DS	70 psi	under hood, DS	n/a	1
Silverado 3500	15-17	under seat, DS	60 psi	under hood, DS	n/a	1
Sonic	12-16	under front seats	60 psi	under hood, DS	n/a	
Spark	14-15	under seat, DS	60 psi	under hood, DS	n/a	
Spark	16-17	under seat, PS	60 psi	under hood, DS	n/a	
Suburban	08	under seat, DS	60 psi	under hood, PS	n/a	
Suburban	15-16	cargo area	60 psi	under hood, DS	n/a	
Tahoe	15-17	cargo area	60 psi	under hood, DS	n/a	
Traverse	13-17	under seat, PS	60 psi	behind seat, PS	under hood, PS	
<b>CHRYSLER</b>						
200	12-14	cargo area	60 psi	n/a	under hood, DS	
<b>DODGE</b>						
Dart	16	under seat, DS	60 psi	under hood, PS	under hood, DS	
Durango	14-15	under seat, PS	60 psi	under hood, PS	under hood, DS	
Pick-up RAM 1500	11-17	under seat, DS or PS	60 psi	under hood, DS	n/a	



Towing and Suspension Solutions

	year	preferred location for InvisiBrake	starting braking pressure*	location of battery	location of remote positive post, if vehicle is so equipped	Notes
Pick-up RAM 2500	10-17	not recommended	n/a	cargo area	under hood, DS	2
Pick-up RAM 3500	10-17	not recommended	n/a	cargo area	under hood, DS	2
<b>FIAT</b>						
500	12-17	under seat, DS	70 psi	under hood, DS	n/a	
500L	14-16	under seat, DS	60 psi	under hood, DS	n/a	
<b>FORD</b>						
C-Max	13-17	under seat, DS	60 psi	cargo area	under hood, DS	
Edge	11-17	under seat, DS or PS	60 psi	under hood, DS	n/a	
Escape	08	under seat, DS		under hood, DS	n/a	
Escape	11	under seat, PS	75 psi	under hood, DS	n/a	
Escape	12	under seat, PS	60 psi	under hood, DS	n/a	
Expedition	15-16	under seat, DS	60 psi	under hood, DS	n/a	
Explorer	11-12	under seat, DS	60 psi	under hood, DS	n/a	
Explorer (inc. Sport)	13-16	under seat, DS	65 psi	under hood, DS	n/a	
Fiesta	14-17	under seat, DS	60 psi	under hood, DS	n/a	
Fiesta ST	15	cargo area	60 psi	under hood, DS	n/a	
Flex	15-16	under seat, DS	60 psi	under hood, DS	n/a	
Focus	12-17	under seat, DS	60 psi	under hood, DS	n/a	
Focus ST	13-14	under seat, DS	60 psi	under hood, DS	n/a	
Fusion	11	under seat, DS		under hood, DS	n/a	
Fusion	12-17	under seat, DS	60 psi	under hood, DS	n/a	
F-150	10-16	under seat, DS	70 psi	under hood, DS	n/a	
F150 Eco Boost	11	under seat, DS		under hood, PS	n/a	
F-250	17	not recommended	n/a	cargo area	under hood, DS	2
F-350	17	not recommended	n/a	cargo area	under hood, DS	2
Taurus	14-16	cargo area	60 psi	under hood, DS	n/a	
<b>GMC</b>						
Acadia	11-17	behind seat, DS	60 psi	behind seat, PS	under hood, PS	
Canyon	15-17	under seat, DS	70 psi	under hood, DS	n/a	
Savana 2500	07-13	n/a	n/a	n/a	n/a	3
Savana 3500	07-13	n/a	n/a	n/a	n/a	3
Sierra 1500	11-17	under rear seat, DS or PS	60 psi	under hood, DS	n/a	
Sierra 2500	15-16	not recommended	n/a		n/a	2
Sierra 3500	15-16	not recommended	n/a		n/a	2
Terrain	11-12	under seat, DS		under hood, DS	n/a	
Terrain	13-16	cargo area	60 psi	under hood, DS	n/a	
Yukon 1500 and 1500 XL	15-17	cargo area	60 psi	under hood, DS	n/a	
<b>HONDA</b>						
Accord	11	cargo area		under hood, DS	n/a	
Civic	12	under seat, DS or PS		under hood, DS	n/a	
CRV	04-09	under seat, DS	65 psi	under hood, DS	n/a	
CRV	10-11	under seat, DS	65 psi	under hood, DS	n/a	
CRV	12	under seat, DS	65 psi	under hood, DS	n/a	
CRV	13-14	under seat, DS	60 psi	under hood, DS	n/a	
Fit	12	under seat, DS	50 psi	under hood, DS	n/a	
Fit	15-17	cargo area	60 psi	under hood, DS	n/a	
HRV	16	cargo area, under floor	60 psi	under hood, DS	n/a	
Pilot	05	under seat, DS	55 psi	under hood, DS	n/a	
Pilot	12	under seat, DS	65 psi	under hood, DS	n/a	
<b>HYUNDAI</b>						



Towing and Suspension Solutions

	year	preferred location for InvisiBrake	starting braking pressure*	location of battery	location of remote positive post, if vehicle is so equipped	Notes
Accent	12-17	under seat, DS	50 psi	under hood, DS	n/a	
Elantra (inc. GT)	11-17	under seat, DS	60 psi	under hood, DS	n/a	
Veloster	12-13	cargo area	60 psi	under hood, DS	n/a	
Veloster	14-16	under seat, DS	60 psi	under hood, DS	n/a	
<b>Jeep</b>						
Cherokee	14-17	under seat, DS	60 psi	under hood, DS	n/a	
Compass	11-16	under seat, DS	60 psi	under hood, DS	n/a	
Compass Sport	11-16	under seat, DS	60 psi	under hood, DS	n/a	
Grand Cherokee	10-17	under seat, DS	60 psi	under hood, DS	n/a	
Liberty	11	under seat, DS or PS		under hood, DS	n/a	
Patriot	14-17	under seat, DS	60 psi	under hood, DS	n/a	
Wrangler	05	under seat, DS or PS		under hood, PS	n/a	
Wrangler	08	under seat, DS		under hood, PS	n/a	
Wrangler	11	under seat, DS		under hood, PS	n/a	
Wrangler	12-17	under seat, DS	60 psi	under hood, PS	n/a	
<b>KIA</b>						
Rio	12	under seat, DS	50 psi	under hood, DS	n/a	
Sportage	11-12	under seat, DS or PS		under hood, DS	n/a	
Soul	14-16	under seat, DS	60 psi	under hood, DS	n/a	
<b>LINCOLN</b>						
MKS	14-15	cargo area	50 psi	under hood, DS	n/a	
MKT	14-16	under seat, DS	60 psi	under hood, DS	n/a	
MKX	14-17	cargo area	60 psi	under hood, DS	n/a	
MKZ (inc. Hybrid)	13-16	cargo area	60 psi	under hood, DS	n/a	
<b>MAZDA</b>						
Mazda3	10-11	under seat, DS or PS		under hood, DS	n/a	
<b>MERCURY</b>						
Mountaineer	06-10	under seat, rear	65 psi	under hood, DS	n/a	
<b>MINI</b>						
Cooper	11-12	under seat, PS	60 psi	under hood, DS	n/a	
Cooper	13-17	cargo area	60 psi	under hood, PS	n/a	
Cooper F56	16-17	cargo area	65 psi	under hood, DS	n/a	
Cooper Countryman	13-15	cargo area	65 psi	under hood, PS	n/a	
<b>NISSAN</b>						
Juke	15	under seat, DS	60 psi	under hood, PS	n/a	
Pickup Frontier	13-17	under seat, DS	60 psi	under hood, PS	n/a	
Sentra	16-17	cargo area	60 psi	under hood, DS	n/a	
Versa	15-17	under seat, DS	60 psi	under hood, DS	n/a	
Versa Note	14-16	under seat, DS	60 psi	under hood, DS	n/a	
Versa Note with power seats	14-15	n/a	n/a	n/a	n/a	3
<b>SATURN</b>						
Station Wagon	02	under seat, DS or PS		under hood, DS	n/a	
L-Series	03	under seat, PS		cargo area	n/a	
<b>SCION</b>						
TC	14-16	cargo area	60 psi	under hood, DS	n/a	
XB	13-15	under seat, DS	60 psi	under hood, DS	n/a	



Towing and Suspension Solutions

	year	preferred location for InvisiBrake	starting braking pressure*	location of battery	location of remote positive post, if vehicle is so equipped	Notes
<b>SUBARU</b>						
CrossTrek	16-17	under seat, DS	60 psi	under hood, PS	n/a	
Forester	14-17	under seat, DS or PS	60 psi	under hood, DS	n/a	
Impreza	15-16	under seat, DS	60 psi	under hood, DS	n/a	
Impreza WRX	15-17	under seat, DS	60 psi	under hood, DS	n/a	
Legacy Outback	11-15	under seat, DS	65 psi	under hood, DS	n/a	
Legacy	14	under seat, DS	65 psi	under hood, DS	n/a	
Outback	12-15	under seat, DS	65 psi	under hood, DS	n/a	
XV CrossTrek	15	under seat, DS	60 psi	under hood, DS	n/a	
<b>SUZUKI</b>						
Grand Vitara	11-12	under seat, DS	60 psi	under hood, PS	n/a	
<b>TOYOTA</b>						
4Runner	14-16	not recommended	n/a		n/a	2
Corolla	13-17	under seat, DS	60 psi	under hood, DS	n/a	
Corolla iM	17	under seat, DS	60 psi	under hood, DS	n/a	
Tacoma	12	under seat, DS	50 psi	under hood, DS	n/a	
Tacoma	16-17	behind seat, DS	65 psi	under hood, DS	n/a	
Tundra	15-17	under seat, DS	60 psi	under hood, DS	n/a	
Yaris	12-17	under seat, DS	60 psi	under hood, DS	n/a	
<b>VOLKSWAGEN</b>						
Bug	12	cargo area	60 psi	under hood, PS	n/a	
Golf	12-15	cargo area	60 psi	under hood, DS	n/a	
Jetta	15-17	cargo area	60 psi	under hood, DS	n/a	

**Notes:**

1. InvisiBrake is not compatible with diesel models of this vehicle.
2. InvisiBrake is not compatible with Hydroboost brakes.
3. InvisiBrake may not fit under the seats of vehicles with power seats.

\* **This braking pressure is just a starting point. Please refer to the installation instructions for adjusting braking pressure, as the pressure needed can vary due to the following:**

- Number of curves and tightness of the curves in the cable. The tighter the curves, the higher the pressure to achieve the same amount of braking power.
- Location of the clamp on the brake pedal arm -- the higher the clamp, the higher the pressure to achieve the same amount of braking power.
- Hybrids should always start at 15 psi and be adjusted up accordingly, depending on the vehicle.