

# Metric-to-standard brake line tee

part number 7921


Use the 7921 brake line tee to install the BrakeMaster 9060 proportioning valve in motorhomes with metric brake lines. For many applications, the brake line tee may be attached as shown below – at the junction of the steel brake line to a rubber brake hose.

Refer to the complete installation instructions for additional information – the most recent revision is available at the ROADMASTER website – [www.roadmasterinc.com](http://www.roadmasterinc.com).

## WARNING

**Do not install the brake line tee, or any component of the BrakeMaster supplemental braking system, without reading the complete installation instructions.**

**Failure to understand how to install or operate the BrakeMaster system could result in property damage, personal injury or even death.**

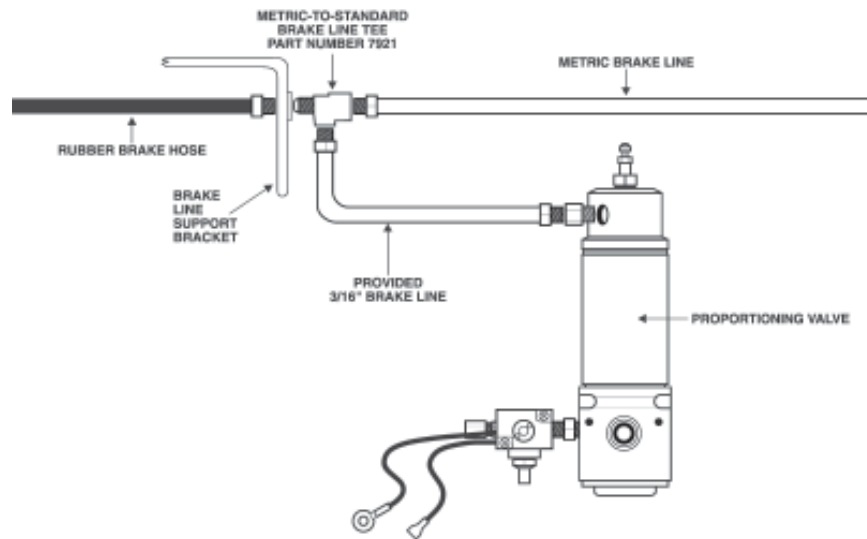

Quality Towing Systems since 1974  
ROADMASTER, Inc. • 5602 N.E. Skyport Way • Portland, OR 97218  
• 800-669-9690 • Fax 503-288-8900 • [roadmasterinc.com](http://roadmasterinc.com)  
All specifications are subject to change without notice.