



BASEPLATE KIT INSTALLATION INSTRUCTIONS


KIT# 1541-5

09/27/22
KS

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

Important

Note: this baseplate will not accommodate the Guardian rock shield, some models of the Tow Defender, Stowaway or any StowMaster tow bars.

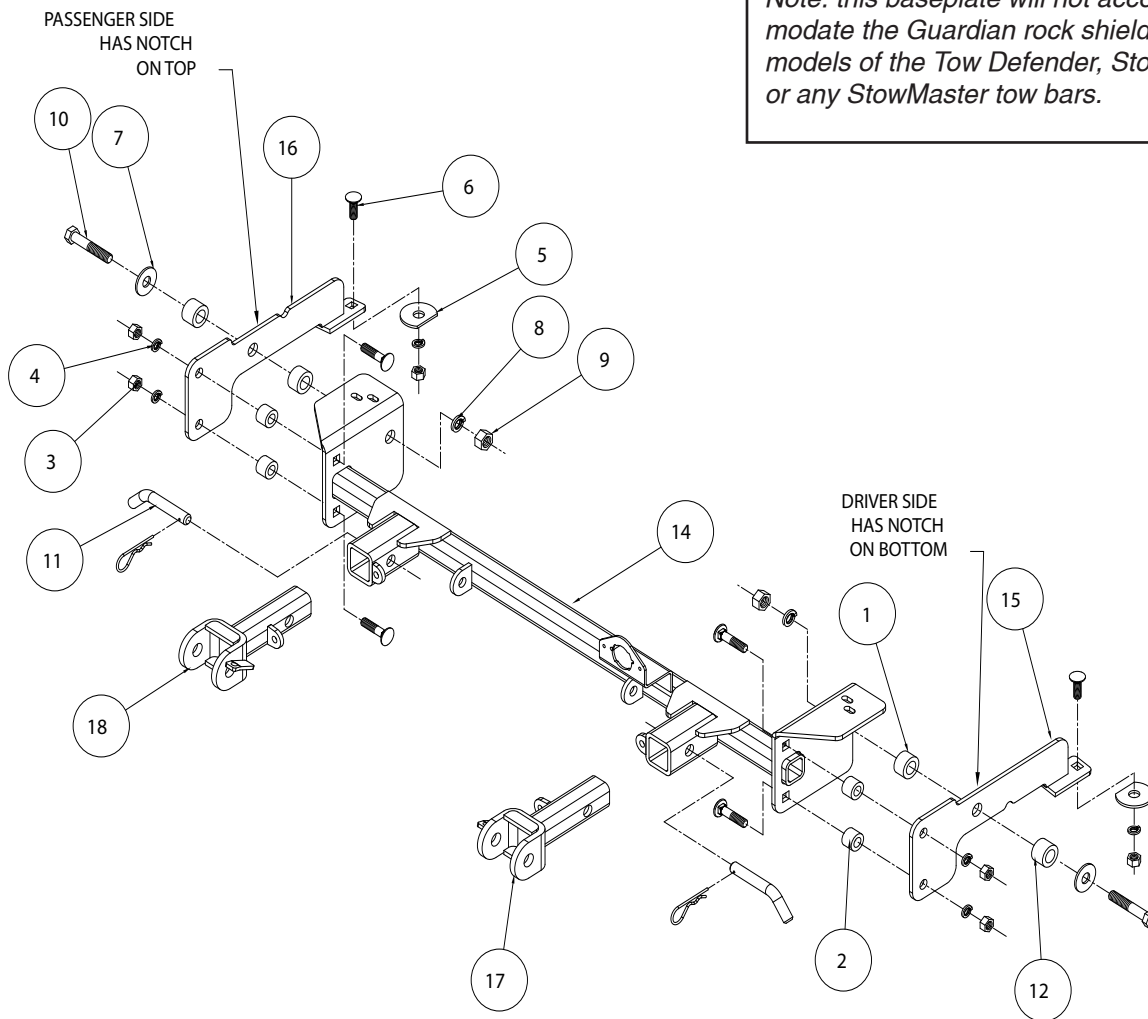

ITEM	QTY	NAME	PART#
1.....2.....1	1	1 1/4" O.D. x 0.250" WALL x 3/4" TUBE SPACER	A000559
2.....4.....1	1	1" O.D. x 0.188" WALL x 3/4" TUBE SPACER	A000558
3.....6.....1	2	1/2" HEX NUT	350258-00
4.....6.....1	2	1/2" LOCK WASHER	350309-00
5.....2.....1	2	1/2" CLIPPED PLATE WASHER	A001511
6.....6.....1	2	1/2" x 2" CARRIAGE BOLT	350373-00
7.....2.....1	2	5/8" FLAT WASHER	350312-00
8.....2.....1	2	5/8" LOCK WASHER	350313-00
9.....2.....1	2	5/8" HEX NUT	350262-00
10.....2.....1	2	5/8" x 3 1/2" BOLT	350163-00
11.....2.....1	2	DRAW PIN / SPRING PIN	357035-00
12.....2.....1	2	1 1/4" O.D. x 0.250" WALL x 7/8" TUBE SPACER	A000481
13.....2.....1	2	7" ZIP TIE	300140-00
14.....1.....1	1	MAIN RECEIVER	C000292
15.....1.....1	1	DRIVER SIDE FRAME BRACE	C000295
16.....1.....1	1	PASSENGER SIDE FRAME BRACE	C000296
17.....1.....1	1	DRIVER SIDE ARM	C000637
18.....1.....1	1	PASSENGER SIDE ARM	C000638




BASEPLATE KIT INSTALLATION INSTRUCTIONS

KIT# 1541-5

09/27/22
KS

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

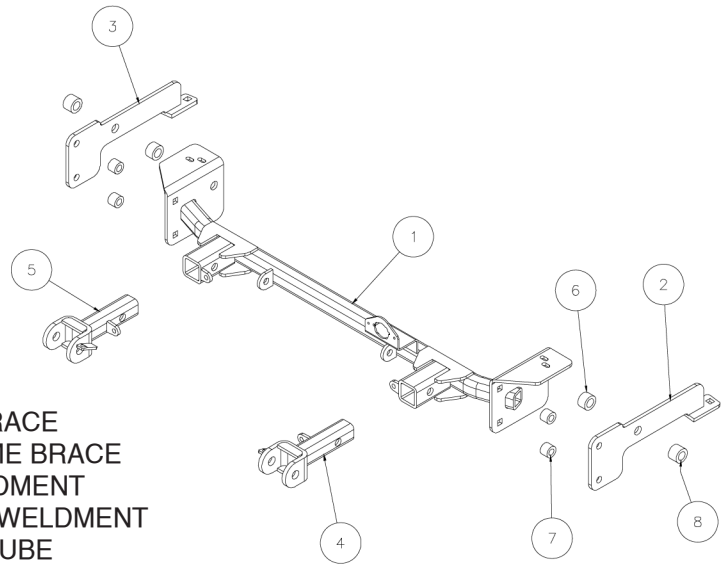

Item	Qty	Part No.	Assembly
1	1	C000292B	MAIN RECEIVER BRACE
2	1	C000295	DRIVER SIDE FRAME BRACE
3	1	C000296	PASSENGER SIDE FRAME BRACE
4	1	C000637	DRIVER SIDE ARM WELDMENT
5	1	C000638	PASSENGER SIDE ARM WELDMENT
6	2	A000559	1 1/4" x 3/4" x .25 WALL TUBE
7	4	A000558	1" x 3/4" x .219 WALL TUBE
8	2	A000481	1 1/4" x 7/8" x .25 WALL TUBE

IMPORTANT: All baseplates **must** be assembled with all the bolts left loose for final adjustment and positioning (before tightening) unless otherwise instructed. All bolts **must** be torqued for proper strength. If more than one bolt is used per fastening point, the diagram may only show one. Use flat washers over all slotted holes and lock washers on all fasteners.

WARNING

Failure to heed these warnings or follow the installation instructions may result in a voided warranty, loss of towed vehicle, personal injury or death.

- Do not weld or modify this baseplate or its components. Welding or modification will void the warranty.
- Do not use this document as a basis to design/fabricate a baseplate, as it may not show all parts or structural components.
- We strongly recommend professional installation.
- If the towed vehicle has been in an accident, it must be properly repaired before attaching the baseplate. Do not install the baseplate if any structural frame damage is found.
- The installer must use all bolts and parts supplied. If running changes were made by the vehicle manufacturer after this kit was designed, some bolts or other fasteners may no longer be the correct size. It is the installer's responsibility to verify this kit is securely fastened to the vehicle.
- Use Loctite® Red on all bolts used to secure this baseplate. Torque all bolts to the specifications found at the end of these instructions. Do not over-torque the bolts or failure may occur.
- The installer must inspect the baseplate to ensure adequate clearance, particularly around hoses, air conditioner lines, radiators, etc. or non-warranty failure may result.
- Roadmaster manufactures many styles of baseplates. If your baseplate has removable arms, they must be removed before driving the vehicle, unless the arms can be pinned or padlocked in place. If not secured, the arms could vibrate out.
- Some motorhome chassis have such a tight turning radius that you can damage your motorhome, towed vehicle, tow bar or baseplate while turning sharply. Before getting on the road, test your turning radius in an empty parking lot. Turning too sharply could

result in non-warranty damage to your towing system, motorhome and/or towed vehicle.

- Do not back up with the towed vehicle attached or non-warranty damage will occur to your towing system or vehicles.
- The safety cables must connect the towing vehicle to the towed vehicle frame to frame, with the cables crossed, with enough slack for sharp turns. See cable instructions for proper routing. Failure to do so will result in non-warranty damage and/or the loss of the towed vehicle.
- This kit is designed for use with ROADMASTER tow bars and ROADMASTER adapters only. Using this kit with other brands, without an approved ROADMASTER adapter, may result in non-warranty damage or injury.
- Receiver extensions and out-of-level towing situations of 3 inches or more. This can cause the system to swing much higher and lower, causing excessive strain on the tow bar, baseplate and frame. That can cause the towing system to fail, causing property damage, personal injury or even death. If you must use a receiver extension or drop hitch to tow, it will reduce your receiver's weight capacity by 1/3 to avoid damaging your system. Never use more than one extension and/or drop hitch, as this will void your warranty.
- Every 3,000 miles, the owner must inspect all mounting points for cracks or fatigue, and check the fasteners for proper torque, according to the bolt torque requirements chart on the last page of these instructions.
- The owner must follow the vehicle manufacturer's instructions to prepare the vehicle for towing. Failure to do so may cause severe damage to the vehicle.
- This baseplate is only warranted for the original installation. Installing a used baseplate on another vehicle is not recommended and will void the warranty.



BASEPLATE KIT INSTALLATION INSTRUCTIONS

KIT# 1541-5

09/27/22
KS

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

This baseplate kit is one of our direct-connect series, which is designed to be partly removable. The kit consists of the main receiver brace, front braces, rear side braces and a hardware pack. The main receiver brace replaces the bumper core behind the front bumper fascia and mounts to the front frame and radiator support area on each side. The front braces insert into the receivers on each side. Start by laying the kit out according to the illustration. This will give you a visual idea of how the kit installs and also confirm that the kit components are present and accounted for.

1. **Important: please use all supplied bolts and parts and read all instructions carefully before beginning this installation. The majority of questions you may have can be answered within the text, and proper installation will ensure safe and secure travel.** Now, begin the installation by removing the plastic fasteners in the top plastic grille cover. You will have five to seven plastic fasteners and a 10mm (head) bolt next to the battery, depending on which model your vehicle is. Once the fasteners are removed, simply lift the cover off and set aside (Fig.A). The Honda Element will have three more plastic fasteners over the headlight area that will have to be removed (Fig.B).

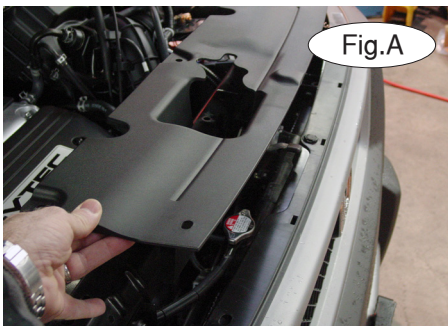


Fig.A

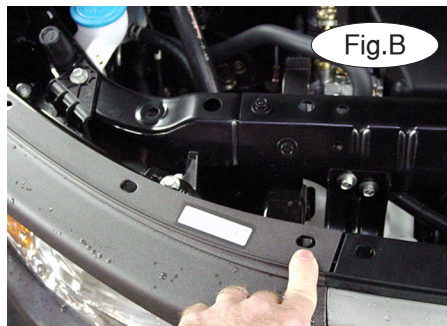


Fig.B



Fig.C

2. Remove three 10mm (head) screws on each side. One is located in the top of the fender well (Fig.C) and two are underneath on each side (Fig.D). Some vehicles may have more fasteners in the fenderwells. Remove the remaining plastic fasteners in the bottom of the fascia. Pull forward on the fascia (Fig.E), disconnect the foglights (Fig.F) then set aside.



Fig.D

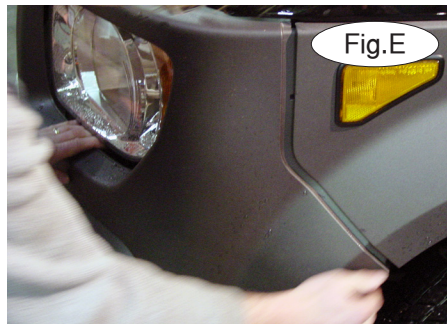


Fig.E

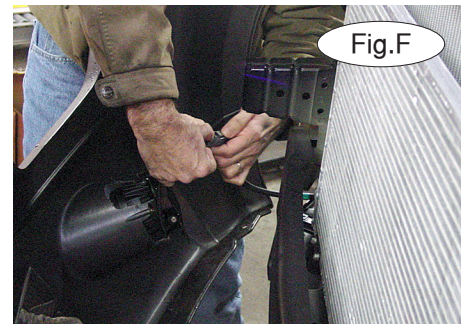


Fig.F

3. Remove the outside temperature sensor from the bumper core and use the two supplied zip ties to reattach the temperature sensor to the main brace after installation (Fig.G). Now, find seven to eight 10mm (head) bolts four or five on the passenger side and three on the driver side, holding the steel bumper core and mounts, remove these bolts on each side (Fig.H) then pull forward to remove the bumper core and the bumper core supports (Fig.I). The bumper core is replaced by the receiver brace and will not be reinstalled. *Note: retain the bumper core and attachment hardware so that it can be replaced if the bracket is ever removed.*

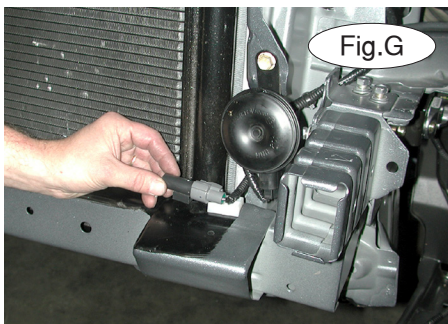


Fig.G

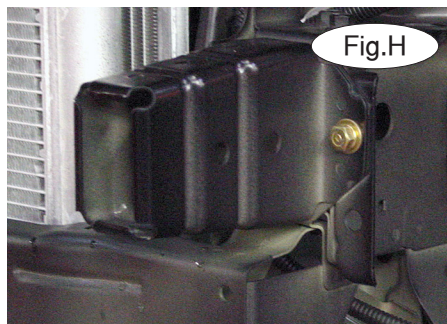


Fig.H

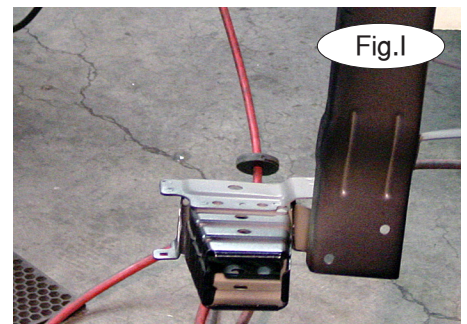


Fig.I



BASEPLATE KIT INSTALLATION INSTRUCTIONS

KIT# 1541-5

09/27/22
KS

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

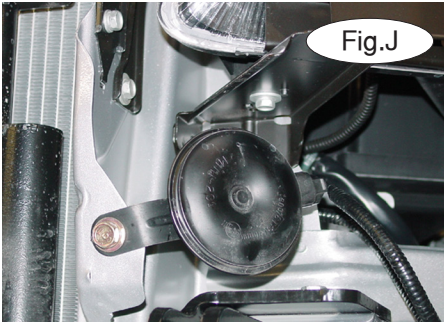


Fig.J

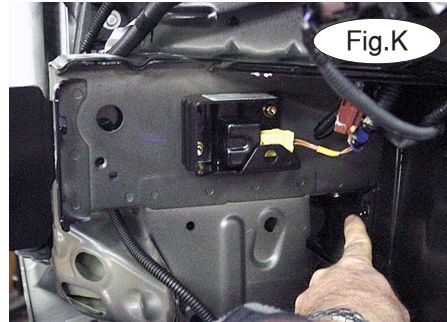


Fig.K



Fig.L

4. Loosen the horns, one 10mm head bolt in each mount (Fig.J).
5. Working on the driver's side, put a $\frac{1}{2}$ " x 2" carriage bolt through the rear mounting hole in a rear side mounting brace. Insert this brace into the front of the formed frame tube with the rear bolt through a corresponding hole in the bottom of the frame. Secure with a $\frac{1}{2}$ " nut, clipped plate washer, lock washer and nut (Fig.K). Leave loose at this time.
6. Repeat step 5 for the passenger side. *Note:* an additional fender well fastener can be removed and the fender liner pushed back to allow access to the rear mounting bolt on the passenger side (Fig.L).

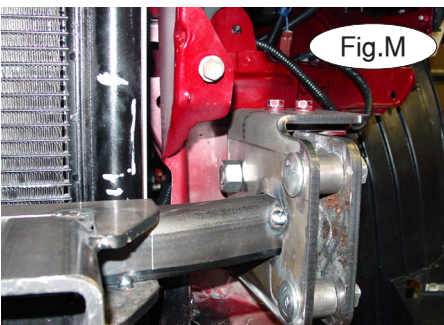


Fig.M

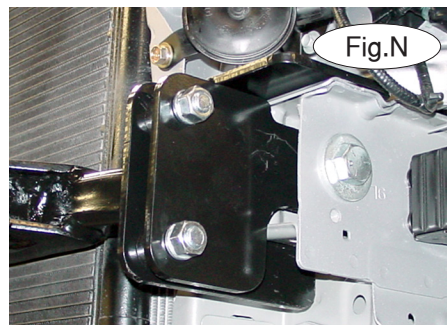


Fig.N

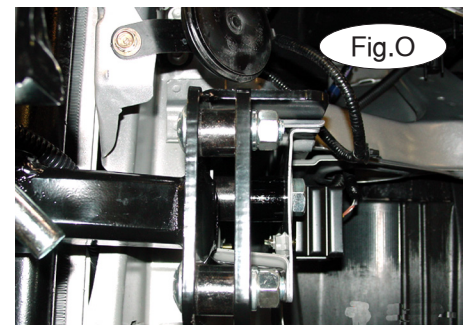


Fig.O

7. Hold the main receiver brace between the frame tubes and bolt through the two top holes on each side with four of the bolts removed from the bumper core in step 3 (Fig.M). Leave loose at this time.
8. Now looking at your illustration, take a $\frac{5}{8}$ " x $3\frac{1}{2}$ " bolt, $\frac{5}{8}$ " flat washer, $\frac{7}{8}$ " x $1\frac{1}{4}$ " o.d. pipe spacer, $\frac{3}{4}$ " x $1\frac{1}{4}$ " o.d. pipe spacer, lock washer and nut. Put a $\frac{5}{8}$ " flat washer on the bolt then insert through an existing frame side hole, a spacer, the rear side brace, a spacer then the other side of the frame and the main receiver brace side plate. Finish with a $\frac{5}{8}$ " lock washer and nut. Do this on both sides (Fig.N,O). *Note:* be sure to place the $\frac{7}{8}$ " long pipe spacer on the outside of the rear braces.
9. Bolt through the two front holes on each side in the receiver brace and side braces with $\frac{1}{2}$ " x 2" carriage bolts, flat washers, $\frac{3}{4}$ " x 1" spacers, lock washers and nuts (Fig.P).
10. Torque all bolts to the bolt torque requirements found at the end of this document.

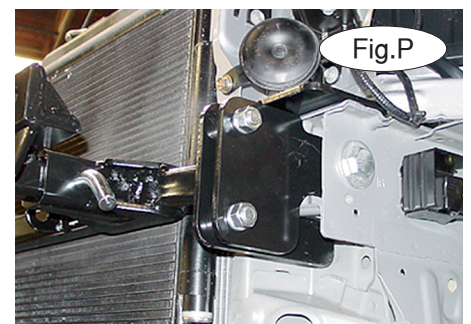


Fig.P



BASEPLATE KIT INSTALLATION INSTRUCTIONS

KIT# 1541-5

09/27/22
KS

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

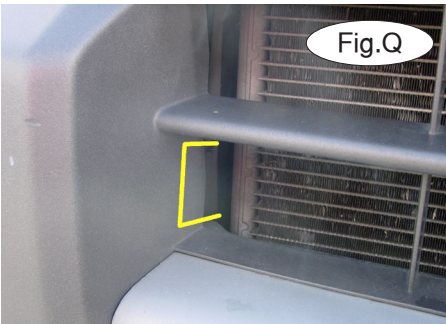


Fig.Q

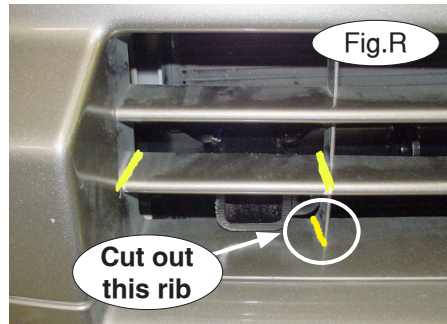


Fig.R

Cut out this rib

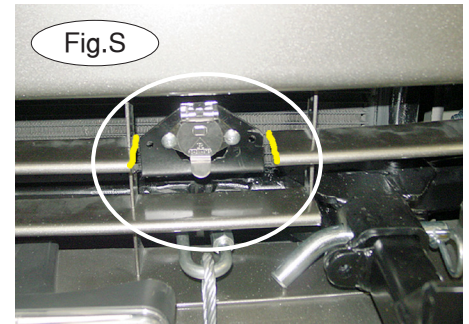


Fig.S

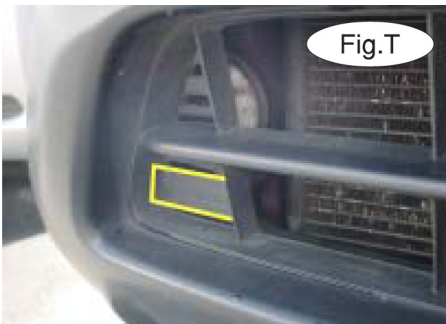


Fig.T

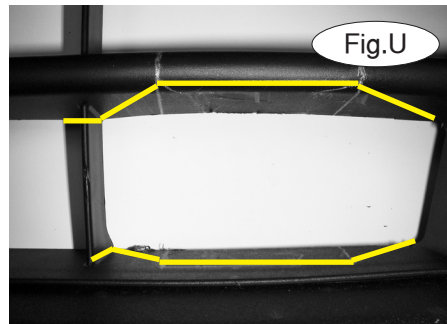


Fig.U

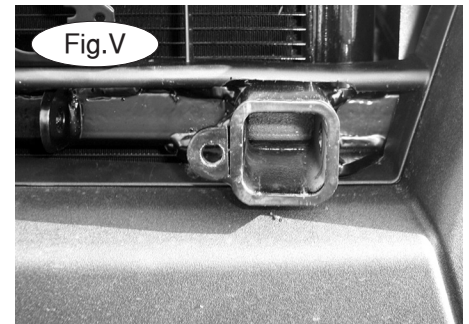


Fig.V

11. Tighten the horns loosened in step 3, bending or displacing the mounting to prevent the horns from touching any part of the vehicle or brace. *Note:* any contact with any object other than the horn mount will either alter or prevent sound output.
12. Reverse steps 1 through 3 to reinstall the bumper fascia and top cover. **For 2003 to 2008 Element models:** you may need to trim the fascia on both sides to accommodate the main receiver brace and the light plug. Refer to the yellow marker lines in Figures Q, R and S for correct trimming. **For 2002 to 2004 CRV models:** refer to the yellow lines in Figure T for correct trimming. **For 2009 to 2011 Element models:** refer to the yellow lines in Figure U as a guide for trimming. Figure V shows the installed bracket after the trimming.
13. Insert the front braces into the receiver tubes and secure with 5/8" draw pins and spring pins .
14. Install the tow bar according to the manufacturer's instructions.

BOLT TORQUE REQUIREMENTS

Note: The torque values represented below are intended as general guidelines. Torque requirements for specific applications may vary. Roadmaster does not warrant this information to be accurate for all applications and disclaims all liability for any claims or damages which may result from its use.

STANDARD BOLTS

Thread Size	Grade	Torque
5/16.....	5.....	13 ft./lb.
3/8.....	5.....	23 ft./lb.
7/16.....	5.....	37 ft./lb.
1/2.....	5.....	56 ft./lb.
5/8.....	5.....	150 ft./lb.

METRIC BOLTS

Thread Size	Grade	Plated / Unplated
8mm-1.0	8.8	20 ft./lb. 18 ft./lb.
8mm-1.25	8.8	19 ft./lb. 18 ft./lb.
10mm-1.25	8.8	38 ft./lb. 36 ft./lb.
10mm-1.5	8.8	37 ft./lb. 35 ft./lb.

METRIC BOLTS

Thread Size	Grade	Plated / Unplated
12mm-1.25	8.8	70 ft./lb. 65 ft./lb.
12mm-1.5	8.8	66 ft./lb. 61 ft./lb.
12mm-1.75	8.8	65 ft./lb. 60 ft./lb.
14mm-2.0	8.8	104 ft./lb. 97 ft./lb.

All illustrations and specifications contained herein are based on the latest information available at the time of publication approval. ROADMASTER, INC. reserves the right to make changes at any time without notice in material, specification and models or to discontinue models.