



# Rear Anti-Sway Bar Kit INSTALLATION INSTRUCTIONS

**KIT# 1139-229**

**08/24**  
RS

ROADMASTER, Inc.

6110 NE 127th Ave.

Vancouver, WA 98682

360-896-0407

www.RoadmasterInc.com

For 2020-2024 Ford Transit 3500 with Dual Rear Wheels ("Dually")

## **⚠ WARNING**

**Failure to follow these instructions can result in property damage, personal injury or even death.**

- If raising the vehicle to install the anti-sway bar, always support the vehicle with jack stands at both frame rails or at the rear axle before working underneath. Ensure that the jack stands are securely positioned, and are rated at or above the weight of the vehicle.
- The installer must read the instructions and use all bolts and parts supplied. Use only the parts supplied by ROADMASTER to install this kit.
- Minor modifications are sometimes necessary due to slight vehicle variations, even for the same year, make and model.
- Regardless of year, make and model, a wide range of options for specific applications may or may not interfere with the installation. It is the installer's responsibility to make certain that equipment is not damaged once the suspension solution travels through the full range of motion. Failure to ensure adequate clearance could result in non-warranty property damage, personal injury or even death.

- If running changes were made by the manufacturer after this kit was designed, there may be weldments, braces, gussets, or other structural items which interfere with the installation. It is the installer's responsibility to allow for these running changes without sacrificing the structural integrity of the anti-sway bar. Failure to securely fasten the anti-sway bar could result in property damage, personal injury or even death.
- ROADMASTER will not be responsible for any damage or injury resulting from any modification or alteration.
- Check ALL the fasteners for tightness before and after road testing the vehicle.
- Do not use this document for custom fabrication, as it may not show all parts or structural components.
- Do not use an air impact wrench when re-installing bolts, as stripped threads may result.
- This anti-sway bar is only warranted for the original installation. Installing a used anti-sway bar on another vehicle is not recommended and will void the warranty.

## **Information:**

Thank you for purchasing this rear anti-sway bar kit. This kit is designed to improve the handling characteristics of your Ford Transit 3500; by reducing the body roll and balancing the weight transfer during cornering.

The anti-sway bar kit is engineered for long life and trouble-free performance. For maximum suspension control, use this kit along with our shock absorbers and our front anti-sway bar kit. All the hardware needed for installation is included in this kit. Refer to the PARTS LIST in these instructions to identify the parts.

Before starting the installation, lay out the kit components in order, as they will be used. This will give you a visual idea of how the components work, and will also confirm that everything is present and accounted for.



## **BOLT TORQUE REQUIREMENTS**

Note: The torque values represented below are intended as general guidelines. Torque requirements for specific applications may vary. Roadmaster does not warrant this information to be accurate for all applications and disclaims all liability for any claims or damages which may result from its use.

### **STANDARD BOLTS**

Thread Size	Grade	Torque
5/16-18	5	13 ft./lb.
3/8-16	5	23 ft./lb.
7/16-14	5	37 ft./lb.
1/2-13	5	57 ft./lb.
5/8-11	5	112 ft./lb.

### **METRIC BOLTS**

Thread Size	Grade	Torque
6mm-1.0	8.8	6 ft./lb.
8mm-1.0	8.8	18 ft./lb.
8mm-1.25	8.8	16 ft./lb.
10mm-1.25	8.8	36 ft./lb.
10mm-1.5	8.8	31 ft./lb.

### **METRIC BOLTS**

Thread Size	Grade	Torque
12mm-1.25	8.8	64 ft./lb.
12mm-1.5	8.8	60 ft./lb.
12mm-1.75	8.8	55 ft./lb.
14mm-2.0	8.8	88 ft./lb.



# Rear Anti-Sway Bar Kit INSTALLATION INSTRUCTIONS

**KIT# 1139-229**

08/24  
RS

ROADMASTER, Inc.

6110 NE 127th Ave.

Vancouver, WA 98682

360-896-0407

www.RoadmasterInc.com

## What You'll Need


Sockets and Wrench  
General Hand tools  
Loctite (Preferable Red)  
Second Person to Help

## About this kit

1 1/2" diameter  
Fits most 2020-2024 Ford Transit 3500 with Dual Rear  
Wheels ("Dually")

Need Help? Call Toll-Free

1-800-669-9690

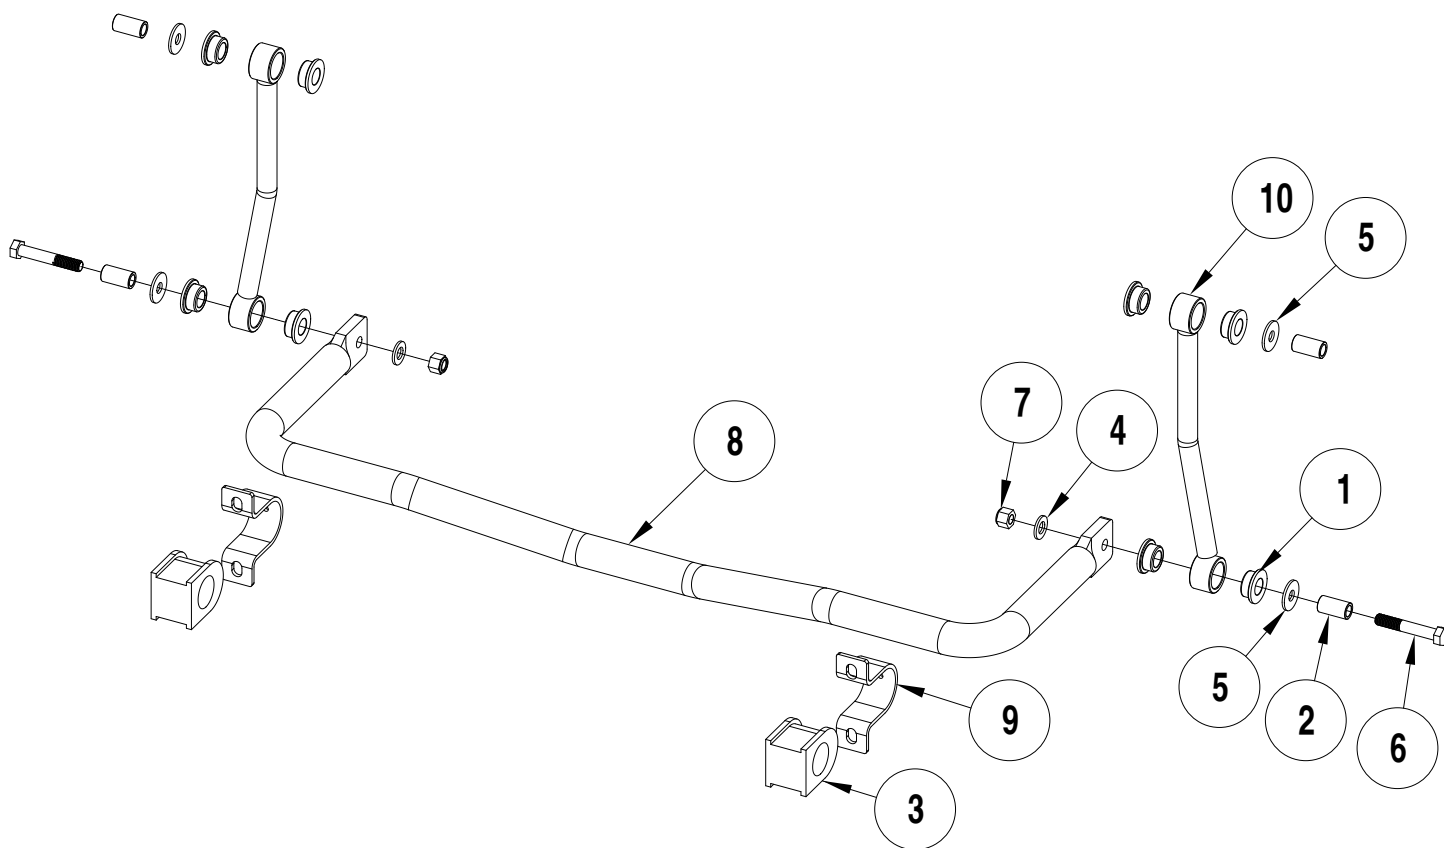

ITEM	QTY.	DESCRIPTION	PART NUMBER
1	8	BUSHING	205223-50
2	4	BUSHING SLEEVE	205522-00
3	2	BUSHING	205540-00
4	2	1/2" SAE WASHER	350308-80
5	4	1/2" FLAT WASHER	350308-00
6	2	1/2-13 x 3" BOLT - GRADE 8	350706-00
7	2	1/2-13 NYLON INSERT LOCK NUT - GRADE 8	350735-00
8	1	ANTI-SWAY BAR	580639-00
9	2	BUSHING CLAMP	B140
10	2	END LINK	B1146
11	1	AQUALUBE	400011-30
12	1	LOCTITE	200544-00



# Rear Anti-Sway Bar Kit INSTALLATION INSTRUCTIONS

KIT# 1139-229

08/24  
RS

ROADMASTER, Inc.

6110 NE 127th Ave.

Vancouver, WA 98682

360-896-0407

www.RoadmasterInc.com

## Installation:


1. Remove the bar, if present, and disconnect the end links from the frame. They will be replaced. Retain the hardware for the bushing clamps.

2. Assemble the end links as shown in the drawing on page 2. Then, install the end links to the frame using the hardware removed in the previous step or new hardware if it is applicable (Fig.B). *Note: Use Loctite Threadlocker on the nuts and bolts of the assembly.*

3. Referencing the front page diagram; With the assistance of a second person, hang the sway bar from the end links and bolt through the bushings and rings using the supplied bolts (Fig.C)

4. Rotate the anti-sway bar up and install the bushing clamps. Then, tighten the bushing clamp and end link bolts to the proper ft./lbs. as detailed in the page 1 table.

5. Recheck all fasteners and then test drive. Recheck fasteners after the test drive.

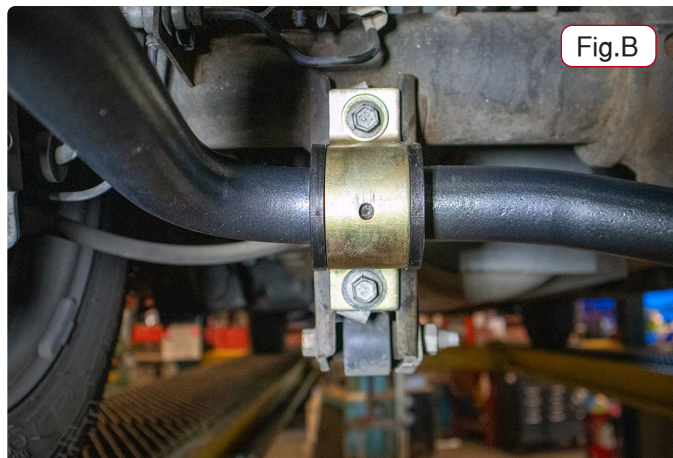

## WARNING

The anti-sway bar is heavy, and may cause property damage or personal injury if it falls on equipment, engine components or any part of your body. Ensure that the anti-sway bar is supported and that you are out of the way when removing the brackets.

**Failure to follow these instructions may cause property damage, personal injury or even death.**

## WARNING

**The anti-sway bar is not a load-bearing component!**  
Do not tow or hoist the vehicle using the anti-sway bar or its mounting brackets as attachment points. The anti-sway bar is not designed to carry the weight of the vehicle and may collapse, which will damage the anti-sway bar components, the suspension, or other components. The vehicle will detach or fall, which may cause severe personal injury.

**Failure to follow the instructions in this packet and the warnings therein may result in property damage, personal injury or even death.**

## WARNING

After road testing, re-check all fasteners for proper tightness – if a fastener has worked loose or fallen off, re-tighten or replace it. Without all kit components properly tightened or in place, the anti-sway bar will not stabilize the vehicle at full capacity, which may cause reduced cornering ability or other reductions in vehicle handling or performance.

**Failure to follow these instructions may cause property damage, personal injury or even death.**